


Perfect Balance


In-Door Return Air Pathway (R.A.P.)

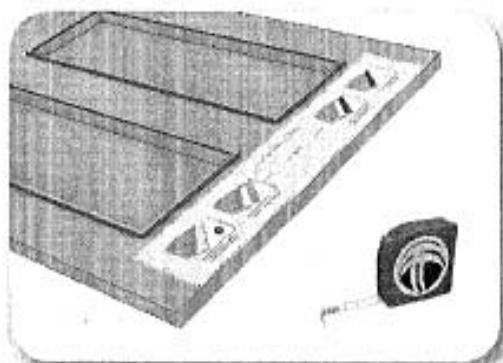

STEP 1


Make cut template

*4-1/4" high x 24-1/2" wide with
3/16" radii in each upper corner*

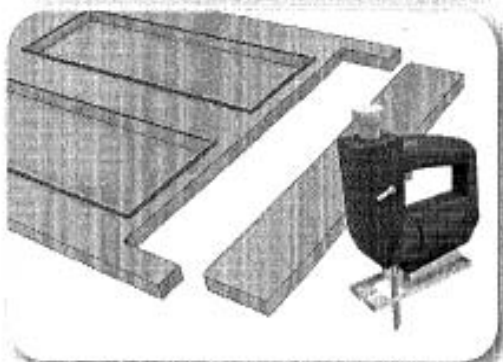


STEP 2

Cut out door section

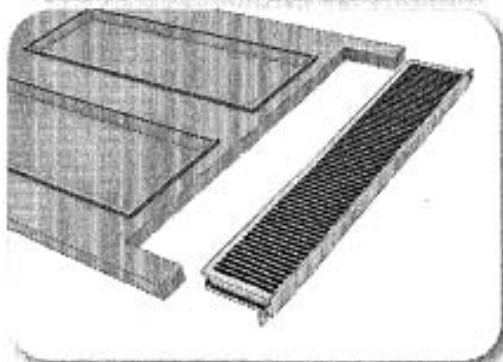

STEP 3

Insert Perfect Balance into door

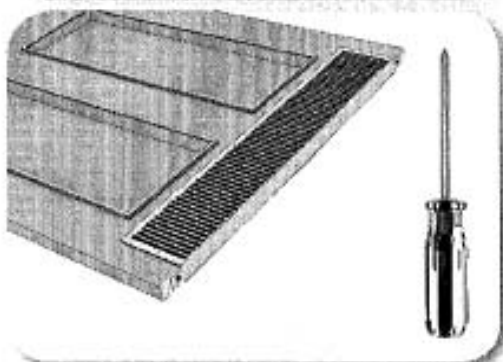

STEP 4

*Secure Perfect Balance to
door with two screws*

Pressure Balanced!